


**SCOPE: Waterproofing of an expansion joint subjected to positive water pressure.**

(4) Suitable mechanical protection

(2) **VANDEX FLEXTAPE**

(1,3) **VANDEX UNIFLEX NV**

Backfilled earth

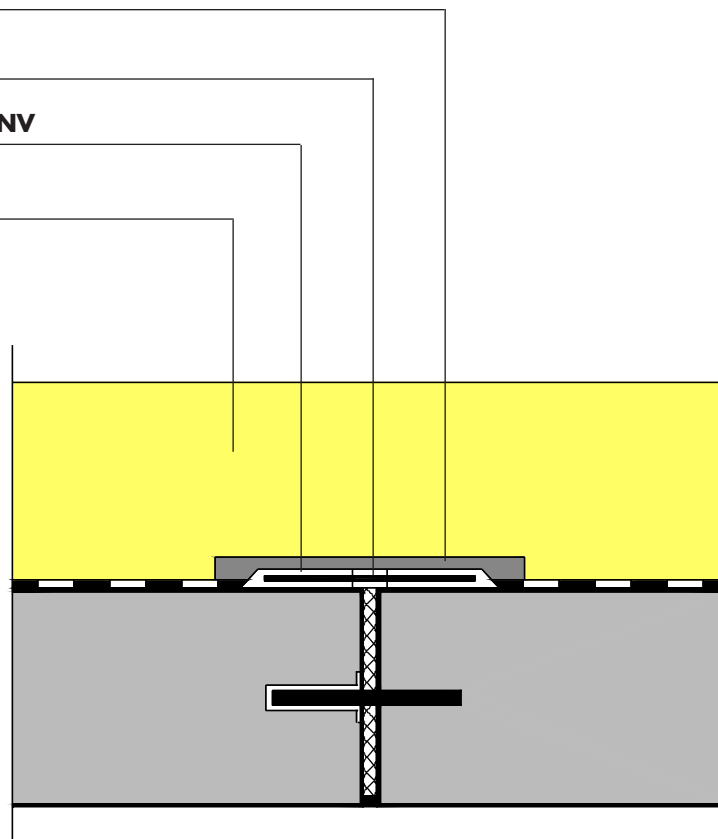

## Application Instructions:

- 1.) Apply first coat of VANDEX UNIFLEX NV to the prepared concrete substrate.
- 2.) Place the VANDEX FLEXTAPE into the VANDEX UNIFLEX NV whilst still plastic.
- 3.) Apply second coat of VANDEX UNIFLEX NV.
- 4.) Provide appropriate mechanical protection to the VANDEX FLEXTAPE system.

The information contained herein is based on our longterm experience and the best of our knowledge. We can, however, make no guarantee since for a successful outcome, all circumstances in an individual case must be taken into consideration. Indications of quantities required are only averages which in certain cases might be greater.